





Leben im Bad
Living bathrooms


MOUNTING INSTRUCTIONS

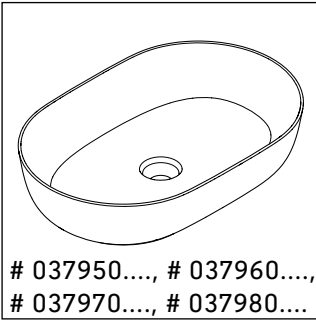



037950..., # 037960...,
037970..., # 037980...

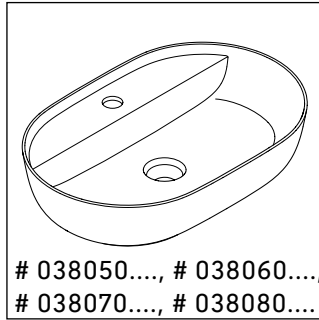


038050..., # 038060...,
038070..., # 038080...

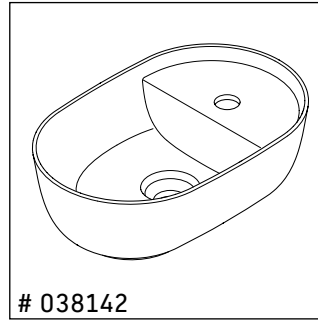

038142

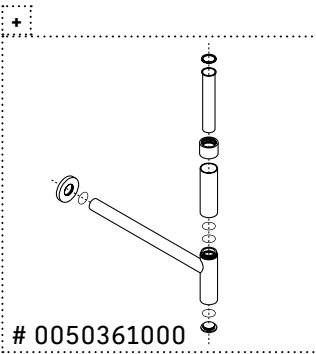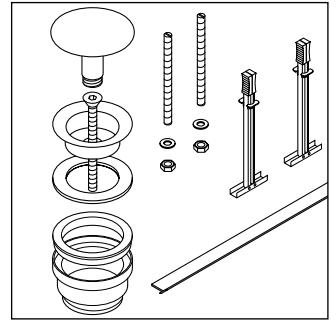


0050361000

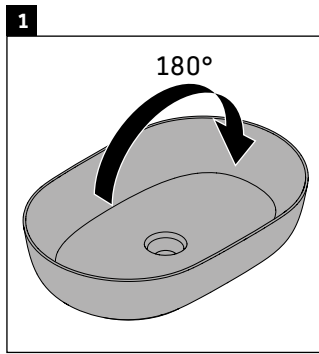


1

180°

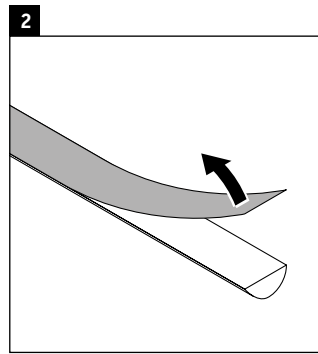


2

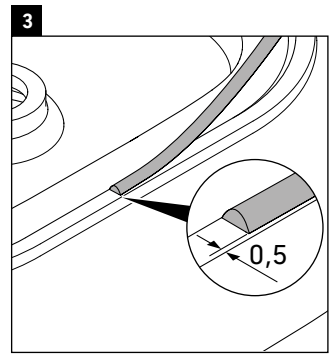


3


0,5

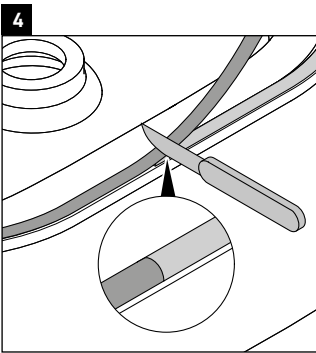


4

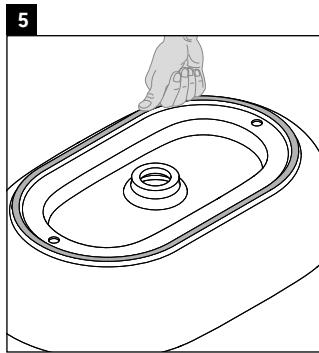


5

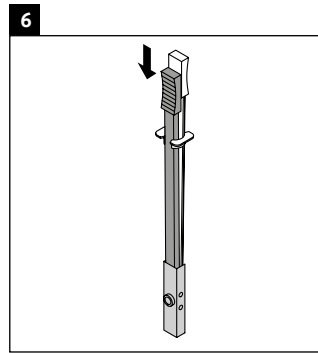


6

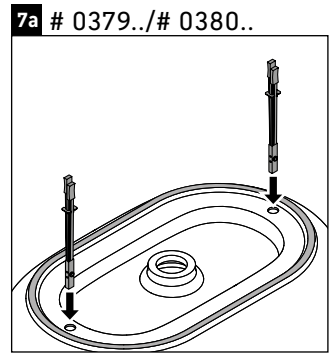


7a # 0379../# 0380..

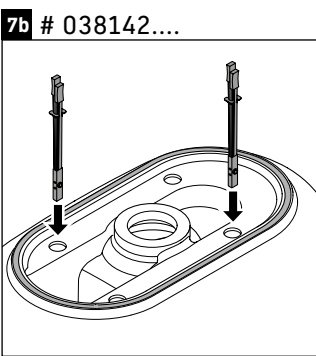


7b # 038142....

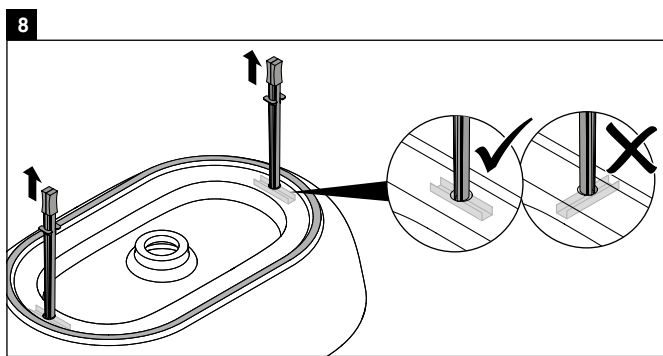


8

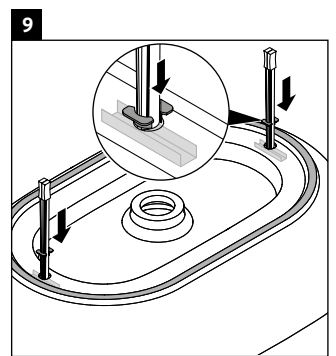

9

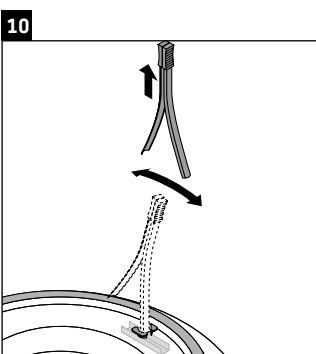


10

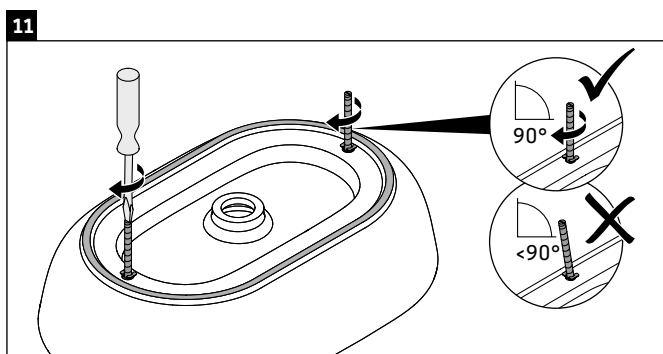

11

90°

<90°

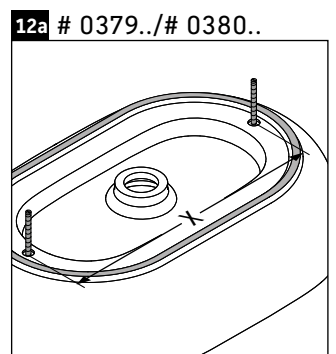

12a # 0379../# 0380..

